

West Coast Chef
COFFEE GRINDER
User Manual

www.thewestcoastchef.com | @thewestcoastchef

Thank You For Choosing West Coast Chef

Warranty Visit coffee.thewestcoastchef.com to get a free one year warranty along with tips and tricks to level up your coffee game.



Get our free coffee grind size chart and become a coffee connoisseur.

Share What's on your #coffeegram?


Tag us in your coffee photography on Instagram @thewestcoastchef. We'd love to see your aesthetic and feature you on our page.

Support Our customer support team is here to make sure you are satisfied.


Website: www.thewestcoastchef.com
Email: support@thewestcoastchef.com

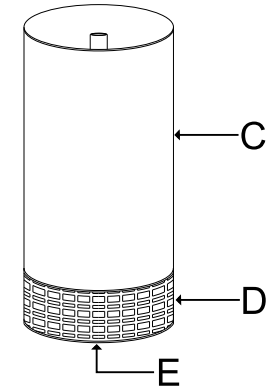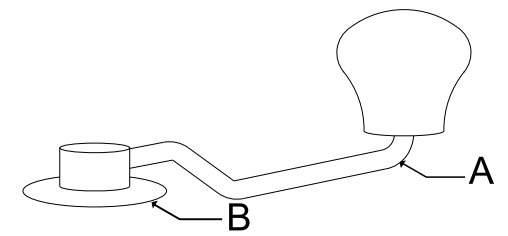


- Ⓐ Handle
- Ⓑ Lid
- Ⓒ Body
- Ⓓ Burr/Grip
- Ⓔ Adjustment Dial
- Ⓕ Container

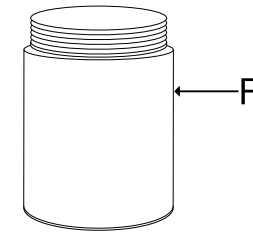


Instructions

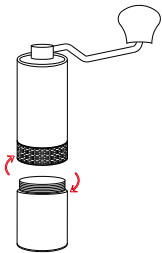


1. Unscrew the container.

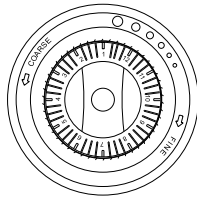


2. With the handle still connected, turn the knob to set up desired coarseness.

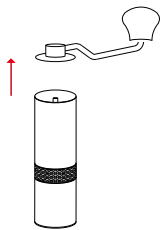


3. Open the lid.

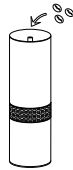

4. Pour coffee beans inside the grinder body.

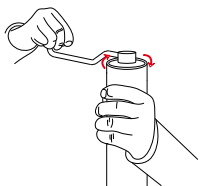


5. Attach lid. Hold the body tightly using the grip. Rotate handle clockwise to grind.

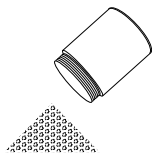

6. Unscrew container and remove coffee grinds.

Adjusting Grind Settings

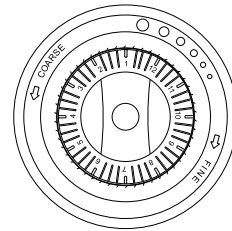

1. Attach lid to grinder body before adjusting grinder coarseness.
2. Begin by rotating the dial clockwise until the grinder has closed completely. This is your starting position. Your starting position may be at any number on the grinder.
3. From starting position, adjust coarseness by rotating the dial counterclockwise referencing the table below. Count up one digit at a time as you pass each number on the grinder until you've reached your goal digit.

| | |
|--------------|--------------|
| ESPRESSO | 3-10 Digits |
| POUR OVER | 11-20 Digits |
| FRENCH PRESS | 21-28 Digits |

☆ This table is for reference only. Please adjust according to your preferences.

☆ The numbers in the table above do not correspond to numbers on the grinder. E.g. If you want to set your grinder at 21 digits and your starting position is 1, complete a full rotation past 1 and end at 10.

Care and Maintenance

- ☆ The grip can be removed by unscrewing it counter-clockwise once the adjustment dial has been unscrewed fully. Doing so exposes the outer burr and interior of the body. Keep the grip closed tightly during grinding.
- ☆ Disassembly of the grinder is not recommended. Cleaning can be done using the accompanying brush.
- ☆ Do not grind coffee beans between 0-2 digits to protect the grinder's sharpness.
- ☆ This device is meant for grinding coffee beans only.
- ☆ The metal burr and grinding core are sharp. Use caution when handling and keep away from children.

Troubleshooting

- ☆ Problem: The adjusting knob has become loose even though I haven't adjusted the coarseness.

Solution: There may be a coffee grind stuck in the burr or spring. Try shaking the body to loosen it or lightly tap it against your palm. If this doesn't work, fully unscrew the adjusting knob and remove the burr and spring. Clean them with the brush before reinserting them back into the device.